

External Memory Buss Connector

22-139 100 sheets



Out
from
CPU

Input
to
CPU

TTY

- 2 FDATA-
- 4 ENABTTY
- 5 GND
- 1 SELECT
- 3 -15V

15 Mem Exist
SELn → 2n-1

10000-17777
120000 12K
130000 16K
140000 20K
150000 24K
160000 28K
170000 32K

WRITE	48
READ	54
MB17	56
MB18	58
MB19	60
SEL1	62
SEL12	64
SEL13	66
SEL14	68
SEL15	70
SEL16	72
SEL17	74
+5V	78
GND	80

1	SMB0-
3	SMB1-
5	SMB2-
7	SMB3-
9	SMB4-
11	SMB5-
13	SMB6-
15	SMB7-
17	SMB8-
19	SMB9-
21	SMB10-
23	SMB11-
25	SMB12-
27	SMB13-
29	SMB14-
31	SMB15-
33	SMB16-
35	SMB17-
37	GND
39	
41	
43	SMB18-
45	SMB19-
47	MA0-
49	MA1-
51	MA2-
53	MA3-
55	MA4-
57	MA5-
59	MA6-
61	MA7-
63	MA8-
65	MA9-
67	MA10-
69	MA11-
71	GND
73	
75	
77	+5V
79	GND

Note: there is No Select for Addr 20000-77777
One could put + Jumper Address lines
to replace Select lines

